



### Dorf

Designed by Drill Design

The spokes, which are characteristic of Windsor chairs, are directly sunk into holes in the seat to portray an arc and attached. The natural wood arm goes around as if joining the spokes, resulting in a backrest design characteristic of the Windsor chair.

Conventionally, the legs of a Windsor chair are directly attached to the bottom of the seat. However, maintaining strength is difficult with such a structure. Hence, Dorf uses a cross-type component to connect the seat and legs and ensure the leg strength, which prevents wood from warping, creating a stable chair.



Dorf

Designed by Drill Design

TIME & STYLE



DD-003 side chair  
W460×D505×H745×SH430



DD-004 armchair  
W570×D494×H703×SH430




DD-005 stool  
W365×D365×H490



DD-006 high stool  
W470×D470×H720

W (width)  
D (depth)  
H (height)  
SH (seat height)

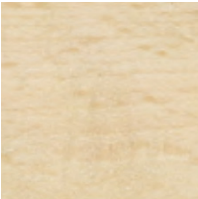

Beech  
Natural white




Beech  
Snow white



Beech  
Medium grey



Beech  
Charcoal grey



Beech  
White